



TPMS Check Box USER MANUAL



1. Open the TPMS Check box



2. Place sensor in pressure box



3. Seal pressure box lid



4. Connect Shop air to the push on fitting



5. Regulate pressure to 32 Psi



6. Trigger Sensor with ATEQ TPMS tool