



VT31 QUICK GUIDE

With the VT31 TPMS tool, users have the ability to read and diagnose tire pressure monitoring sensors.

AVAILABLE IN NORTH AMERICA ONLY

1




Back of tool



Install 9V battery and power on device.

2

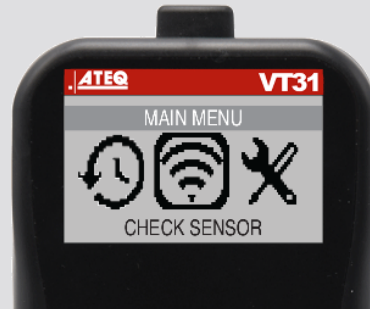

Select CHECK SENSOR, press OK.

3



Select vehicle MAKE, press OK.

4



Select vehicle MODEL, press OK.

5



Select vehicle YEAR, press OK.

6


Tire sequence: (1) left front, (2) right front, (3) right rear, (4) left rear.



Select TIRE, press OK.

7



Point VT31 at tire where sensor is located. Press trigger button  to read sensor.

8

Display information includes sensor ID, pressure, temperature* and battery*.
*Some sensors may not include temperature and battery.



Tire sensor information is displayed.



PLEASE NOTE: Database includes all current domestic direct-type TPMS vehicles, and cannot be updated to include future vehicles.

CONTACT US

NORTH AMERICA
1-888-621-TPMS (8767) English
1-210-451-1074 Español
support@ateqtpmsusa.com

ateq-tpms.com

