


- Connect the USB wire to the USB connector of your PC and TPMS tool.
- Drivers will not install correctly if tool is not properly connected to PC.



- If the following window pops up, please hit “Cancel”.

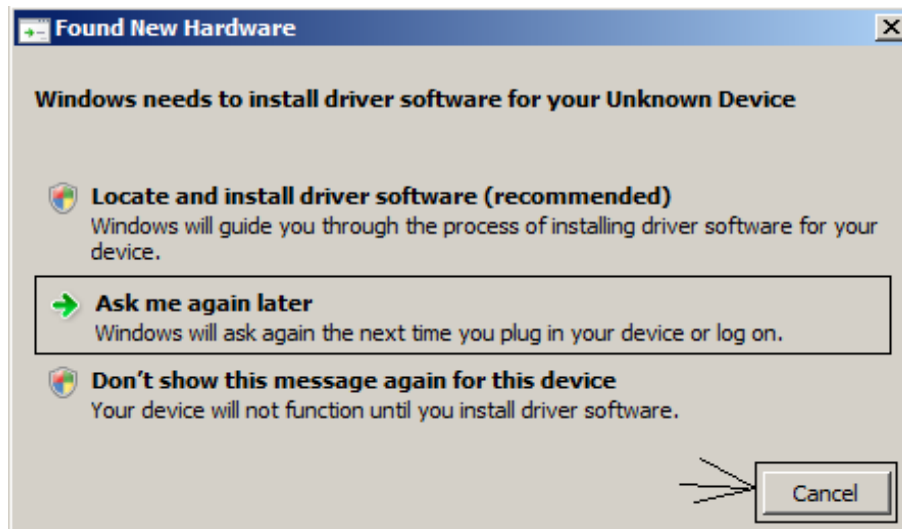


- Click on the appropriate PC Drivers download link with the USB picture as shown below.


DOWNLOADS

<p>TPMS QuickSet</p> <p>Latest CDROM Software</p> <p>Download</p>	<p>TPMS QuickSet</p> <p>Quick Start manual</p> <p>Download</p>	<p>TPMS QuickSet</p> <p>PC Driver</p> <p>Download</p>	<p>TPMS QuickSet</p> <p>Capability / Compatibility Chart</p> <p>Download</p>
<p>VT55 OBDII</p> <p>Latest CDROM Software</p> <p>Download</p>	<p>VT55 OBDII</p> <p>Quick Start manual</p> <p>Download</p>	<p>VT55 OBDII</p> <p>PC Driver</p> <p>Download</p>	
<p>VT30</p> <p>Latest CDROM Software</p> <p>Download</p>	<p>VT30</p> <p>Quick Start manual</p> <p>Download</p>	<p>VT30</p> <p>PC Driver</p> <p>Download</p>	
<p>VT15</p> <p>Latest CDROM Software</p> <p>Download</p>	<p>VT15</p> <p>Quick Start manual</p> <p>Download</p>	<p>VT15</p> <p>PC Driver</p> <p>Download</p>	


- The following window will appear, click on “Save File”.
- Click “OK” to start the downloading process.

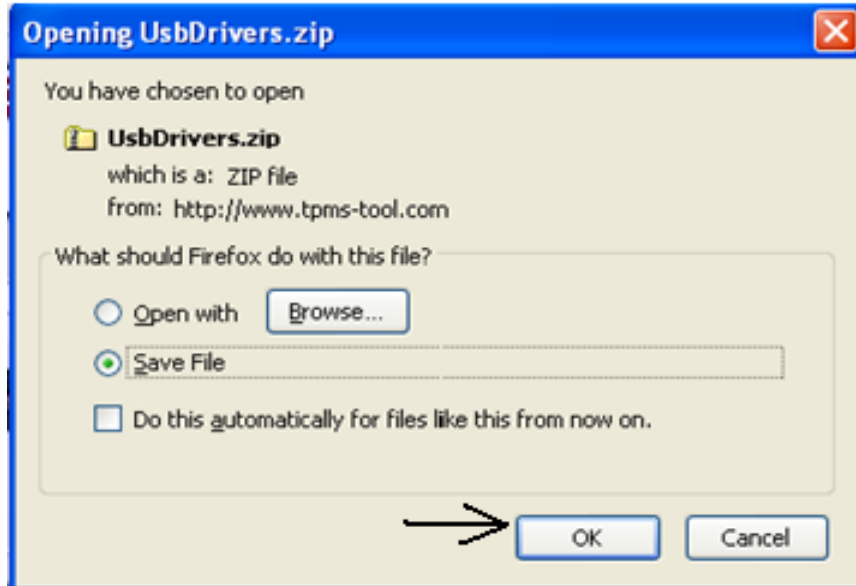


- The “Downloads” window should pop up (depending on Internet Browser).
- Once the file is completely downloaded, right-click on the file and choose “Open” from the menu.

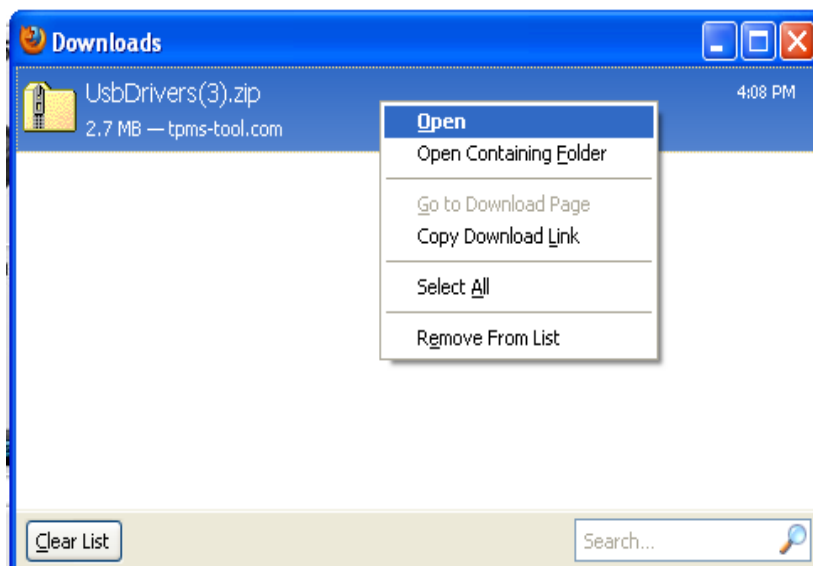


- Right-click or double click on the setup file to start the installation process.

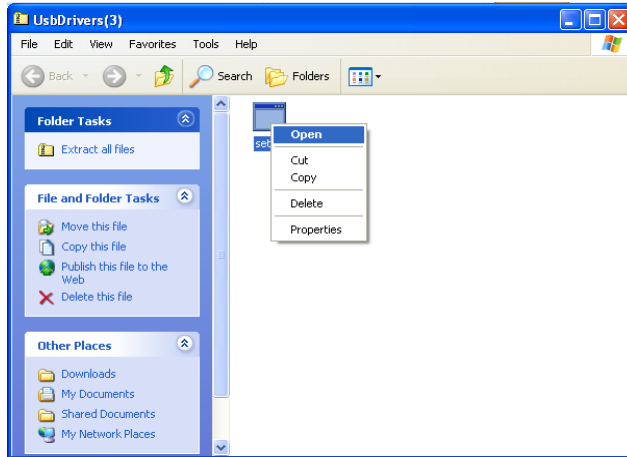


- Click "Run" to continue the process.

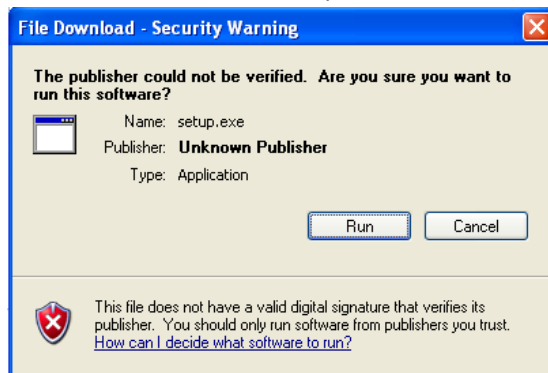

- Click the "Next" button to proceed.

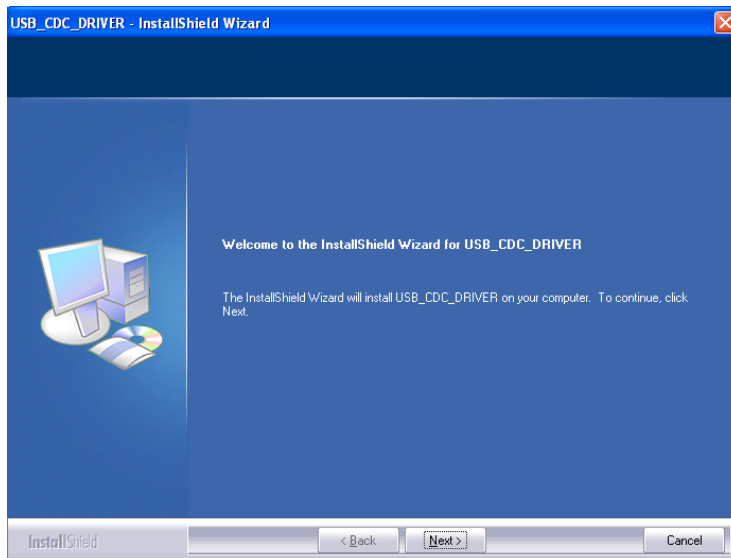

- Click “Install” to continue.

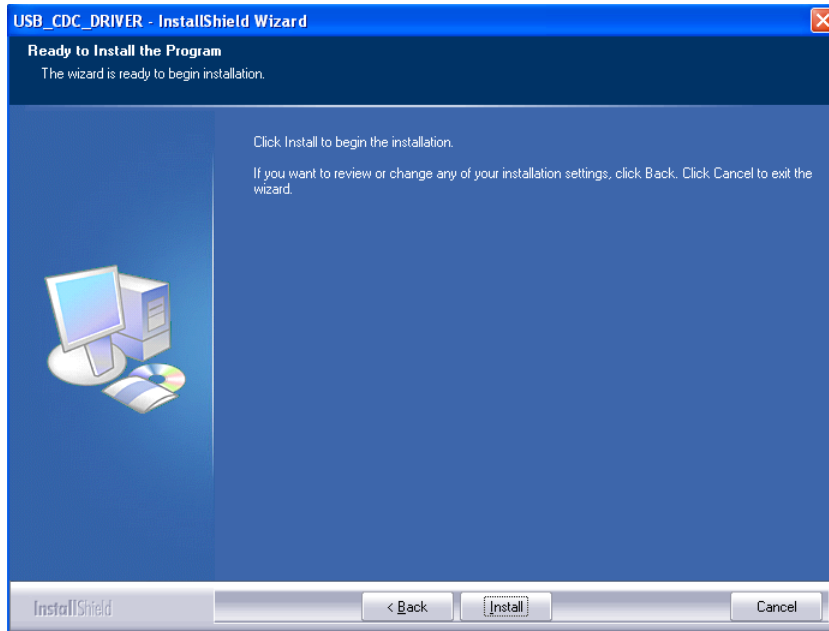

- **Make sure the Tool is properly connected and Powered ON.** Click “Next” for the final step.



- Installation is complete! Click "Finish" to exit the Installation Wizard

